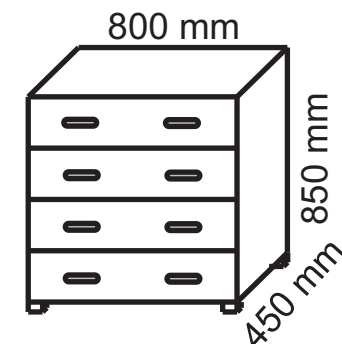



FISA DE MONTAJ

T 11. COMODA





PASUL 1:

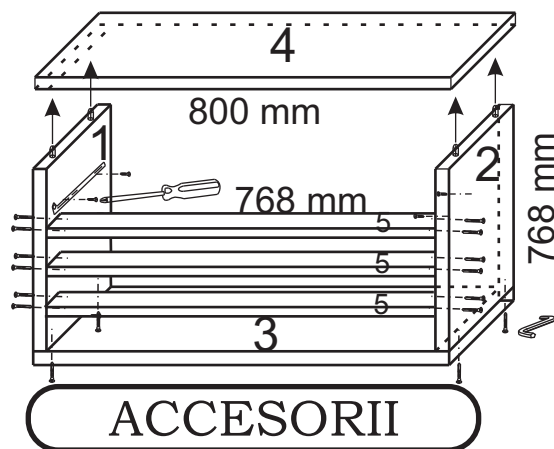Se fixeaza glisierile de cele doua laterale prin holsuruburi 3,5x16. Se prind cele doua laterale (1) si (2) de capacul (3) in gaurile existente, folosind eurosuruburi si cheia imbus inclusa in pachet. Se prind de laterale legaturile (5) prin eurosuruburi.




PASUL 2:









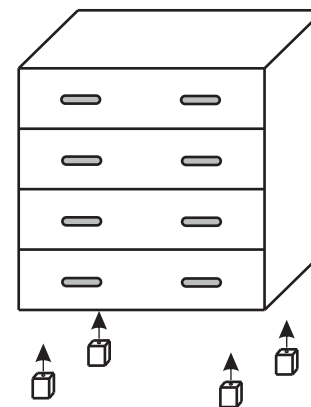
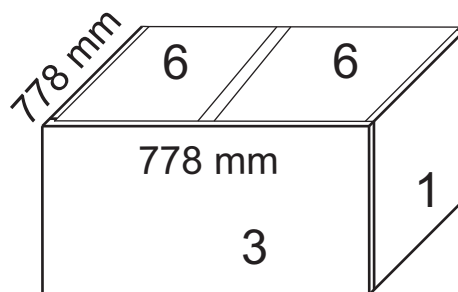
Se prinde cele doua bucati de spate din PFL(6) imbinate prin sina pfl de 778 mm. Se aseaza capacul (4) pe cele doua laterale prin dibluri de lemn. Se monteaza picioarele pe capacul (3).



PASUL 3:

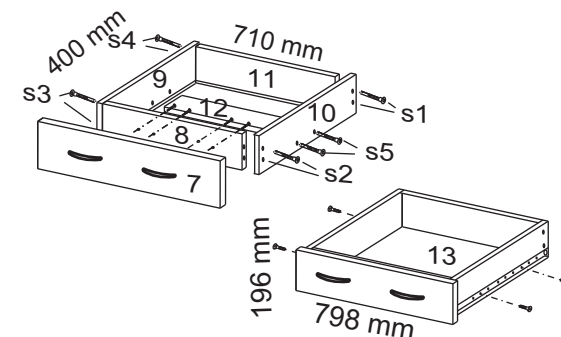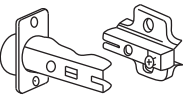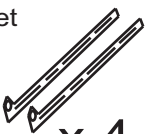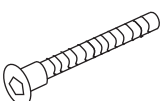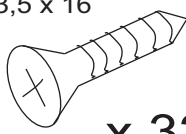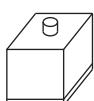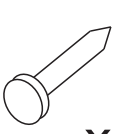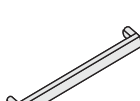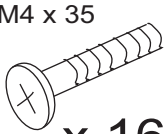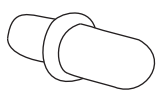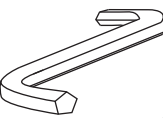Se prind prin eurosuruburi legaturile de sertar (8,9,10,11) prin gaurile existente (s1,s2,s3,s4), fixand mai intai capacul sertarului (13) din PFL de 3 mm in canalele existente pe legaturi. Apoi se prinde legatura (12) sub spatele (13), de legaturile (9,10) prin eurosuruburi. Se prind apoi manerele si fata de sertar (7) de legatura (8) prin suruburi M4x35, apoi se prinde glisiera pe marginile sertarului si se fixeaza sertarul in corp. Se procedeaza asemanator si cu celelalte sertare.



Balama aplicate	Glisiera 400	Eurosurub	Holsurub	Picioare H50	Tinte	Maner	Surub	Suport polita	Cheie imbus
									
Buc. x 0	Set x 4	x 60	3,5 x 16 x 32	x 4	x 0	x 8	M4 x 35 x 16	x 0	x 1